




HP Mini 110-3131dx Keyboard Bezel Replacement

Guide needed for the replacement of the Hard Drive, Screen, Fan, ect.

Written By: aarondcollege

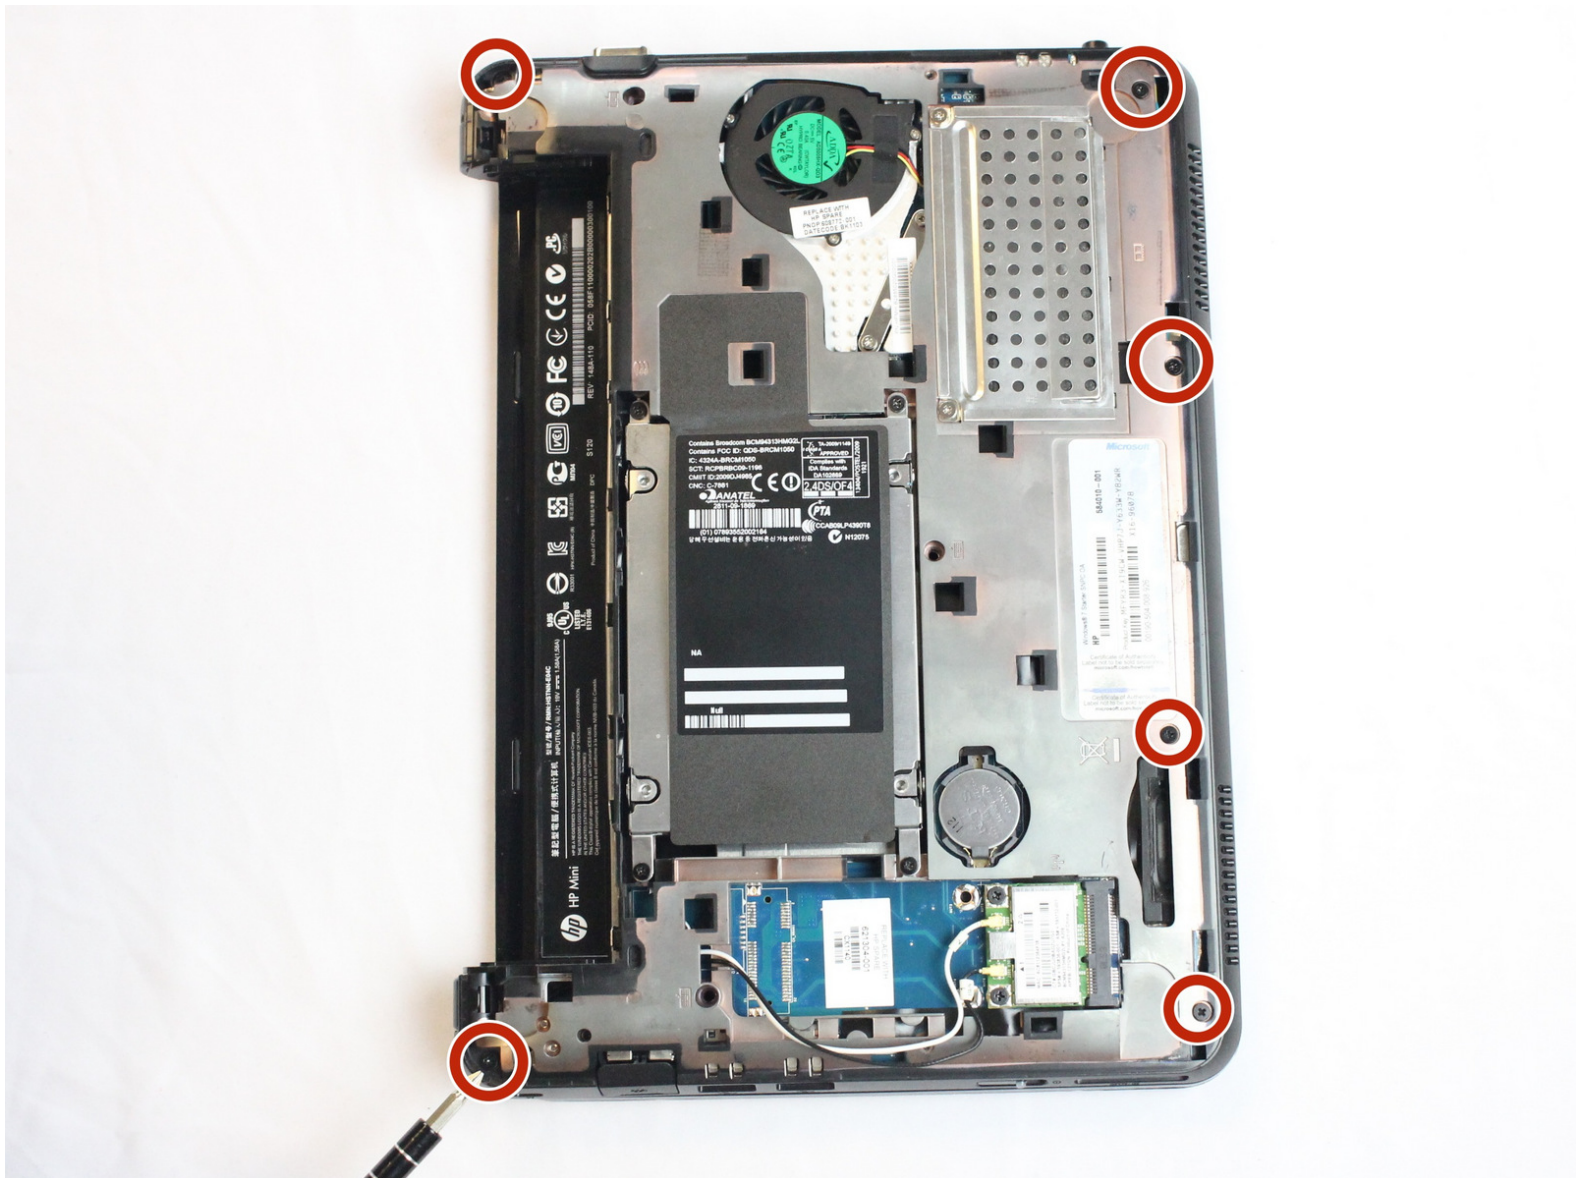



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- Completely turn off the laptop before trying to remove the battery.
- Turn the laptop upside down, and find the sliding tabs located on the battery.
- Slide both tabs in an inward direction then slide the battery away from the laptop

Step 2 — Back Cover

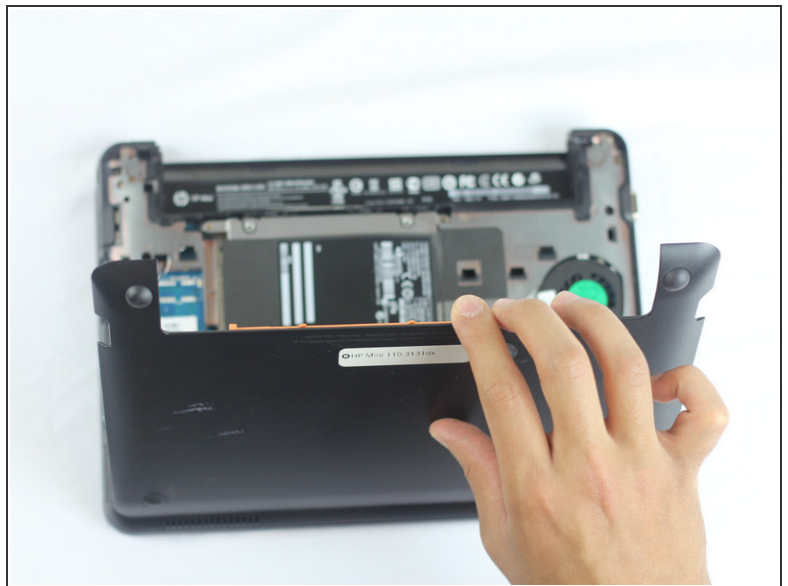



- To remove the bottom cover pull the orange tab to the right until it clicks.
- Carefully disconnect the clips as you lift the bottom cover

Step 3 — Hard Drive

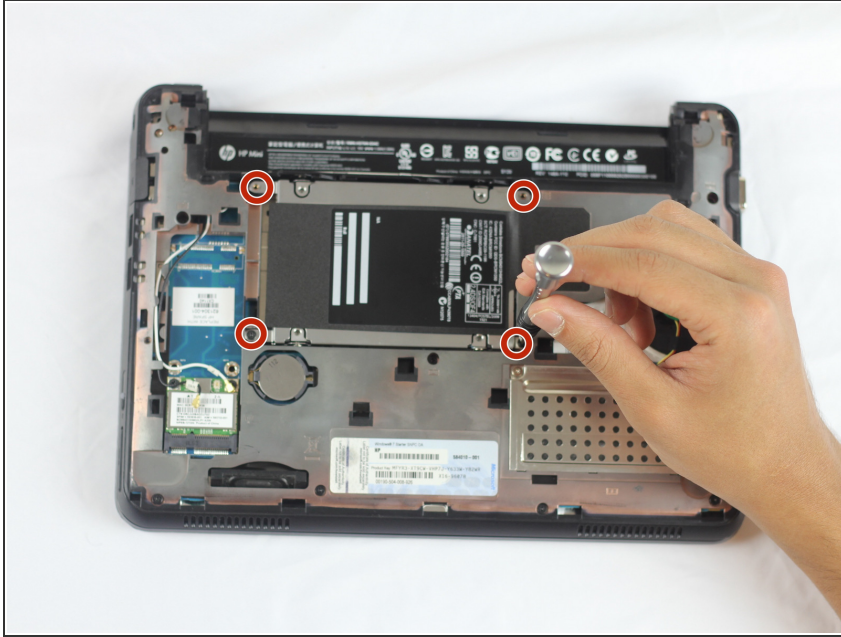



- Remove the four screws holding down the hard drive.
- Use a Phillips PH1 screwdriver for the four black screws around the hard drive

Step 4

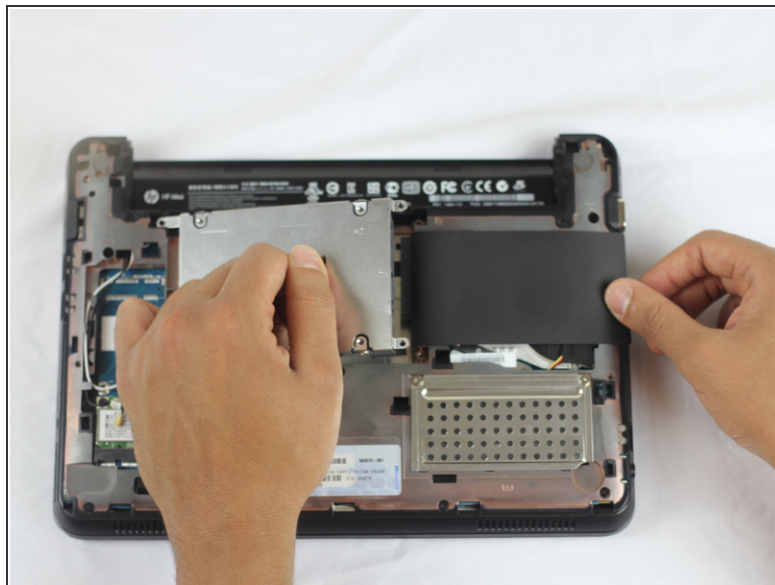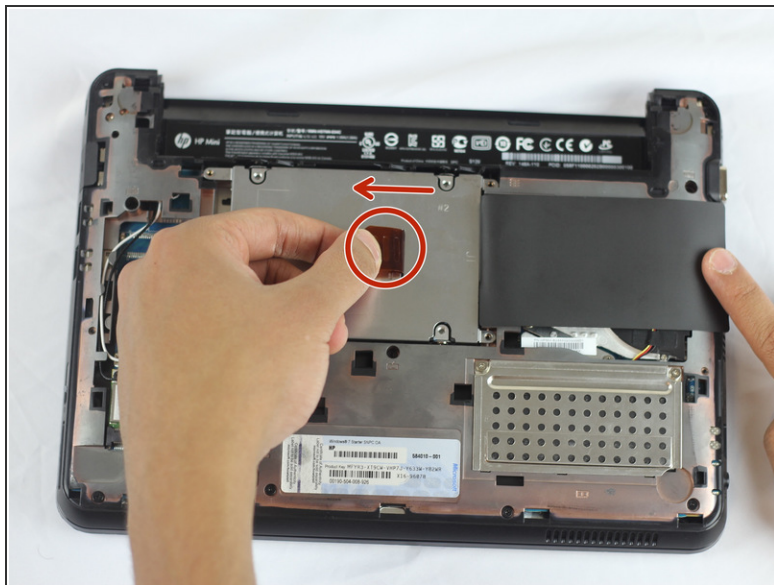

- Lift the black flap covering the hard drive then slide it towards the left using the orange tab until it's released from its receptacle.
 - ⚠ Do not pull out until disconnected
- Pull the hard drive out of the laptop.
 - ⓘ Put the hard drive in an anti-static bag to decrease the likelihood of harming it with static electricity.

Step 5 — Keyboard

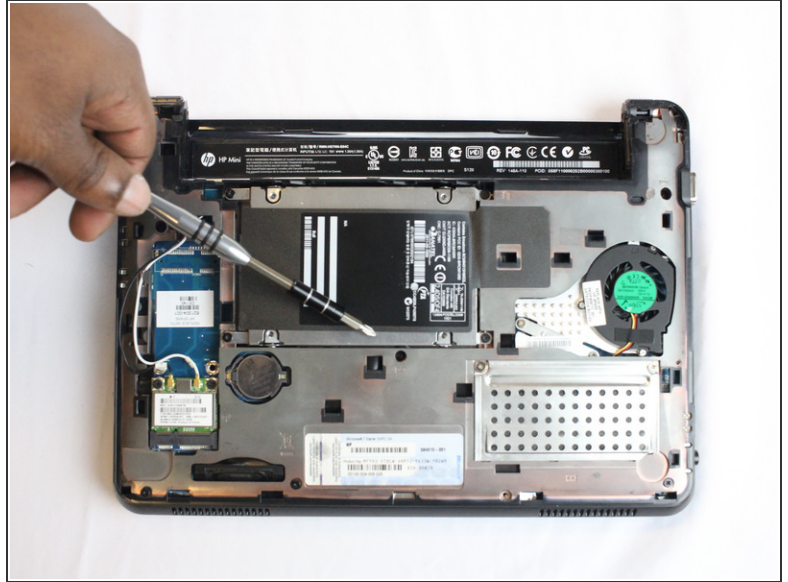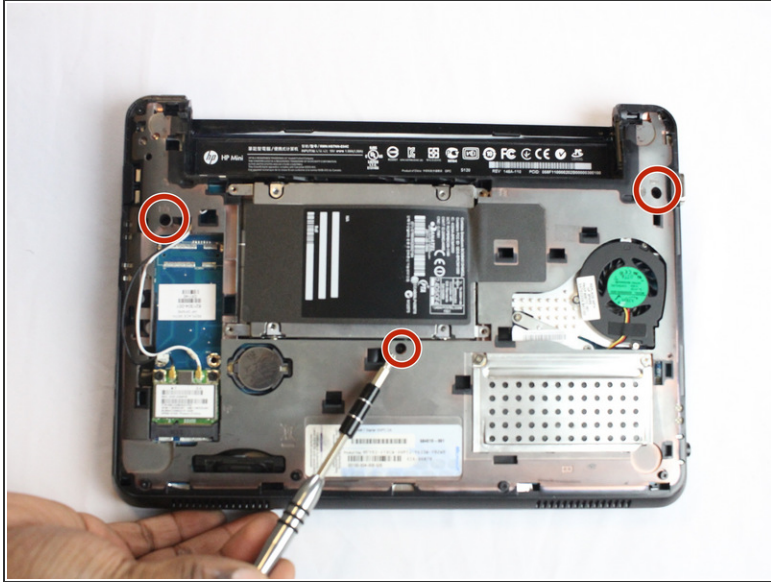

- Remove the three black screws marked by the keyboard symbol using the PH1 screwdriver


Step 6



- Turn the laptop upright and open it
- Disconnect the clips located around the perimeter of the keyboard
 - Starting from either the left or right side, slide the plastic opening tool between the top edge of the keyboard and the plastic bezel (start either above the esc key or the delete key)
- Lever the keyboard up until it comes out or you can also grab the keyboard with your fingers, and then gently pull the keyboard until it comes out on both sides.


⚠ Be careful not to pull keyboard out too fast, because there is a fragile ribbon cable that attaches to the motherboard behind the keyboard.

Step 7

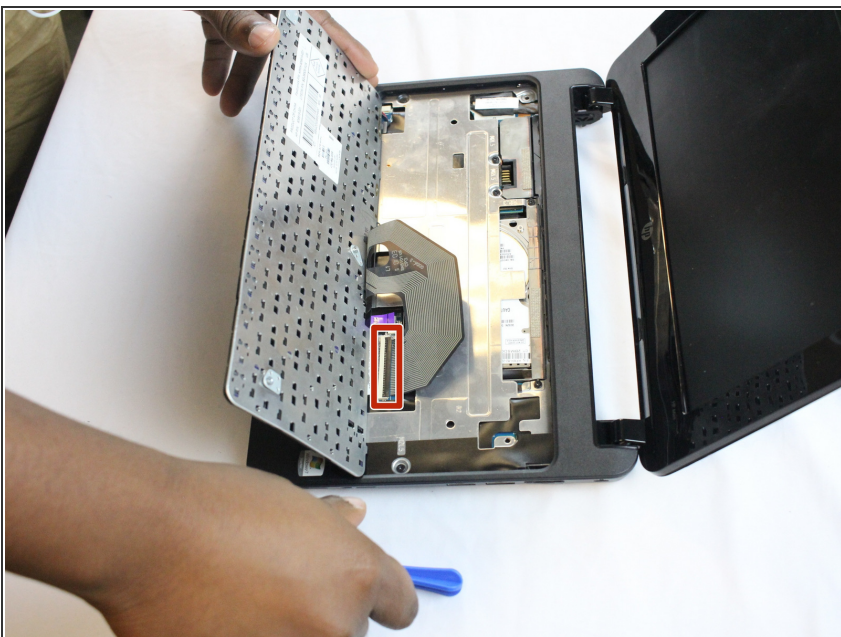



- Tilt the keyboard over to reveal the ribbon cable.
- Lift up the black tab on top of the keyboard ribbon cable to release the ribbon cable.
- Pull the ribbon cable out of the receptacle. This should not require any effort.

Step 8 — Keyboard Bezel

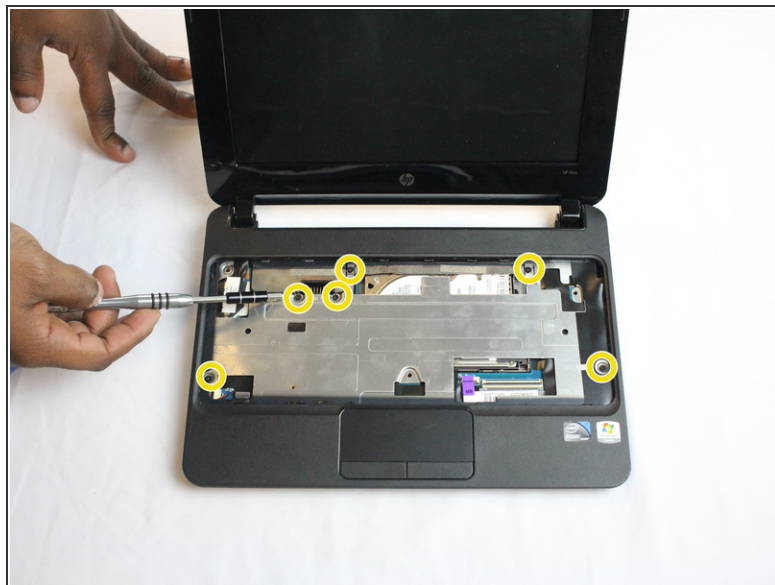


- Using the PH1 screwdriver remove the 6 black screws around the perimeter of the bottom of the laptop
- Flip the laptop over and remove the 6 black screws indicate by the yellow circles
- ⓘ Be sure to keep track of which screws go where as they are not all the same size

Step 9

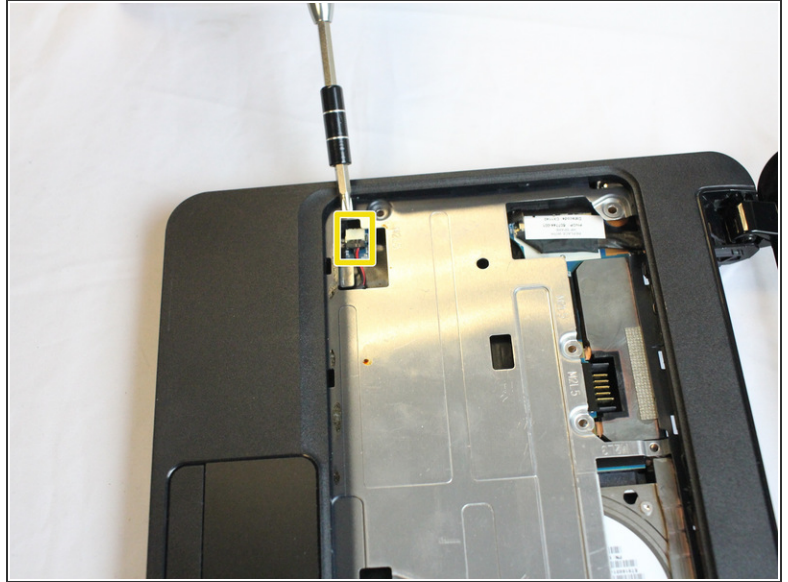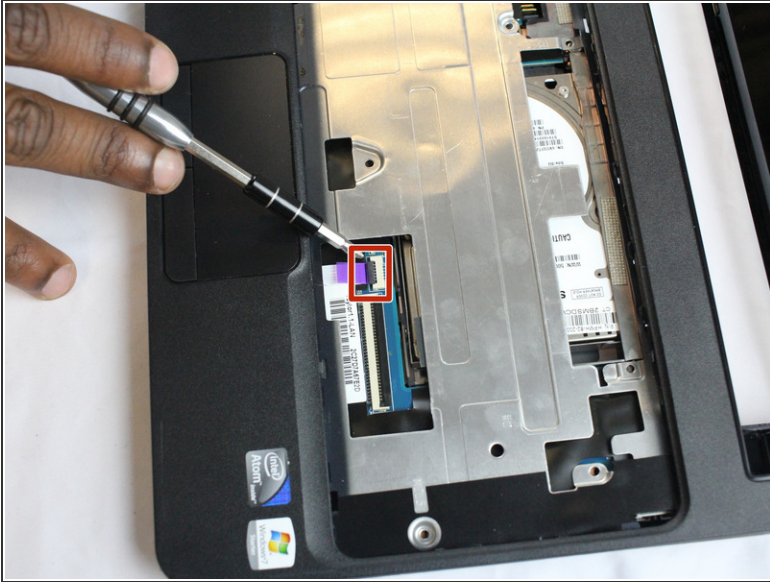

- Locate the black and white tab on the right hand side that connects the touchpad ribbon cable to the motherboard.
- Using your fingernail or a plastic opening tool, flip the black tab up to release the ribbon cable.
- Locate the red and black wires on the left hand side of the bezel.
- Using you fingers or a plastic opening tool, disconnect these wires from the mother board.

Step 10

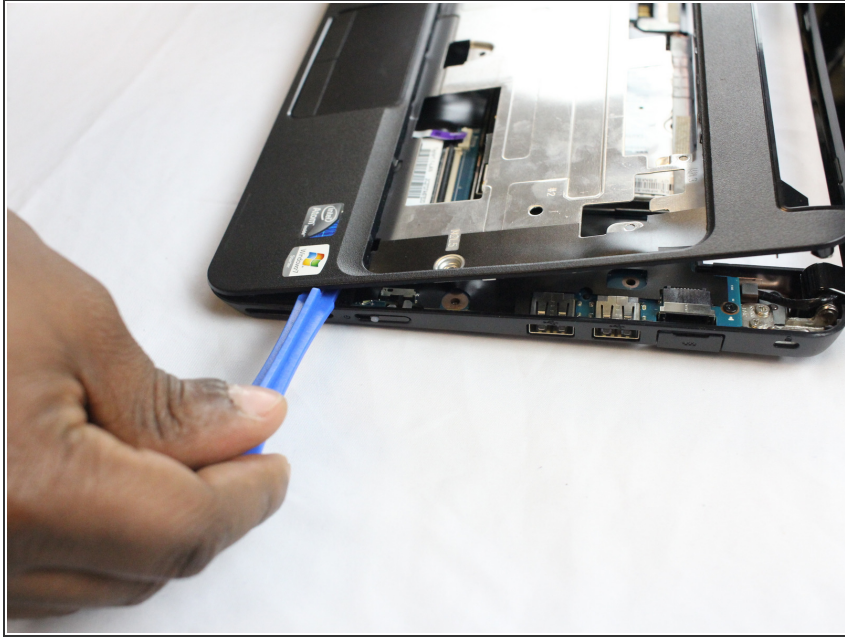

- Lift the bezel from the back end and slide the plastic opening tool around the perimeter of the bezel until it is fully released

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 04:09:01 AM.